

Labels of Instant Start *Reliant* Ballasts for Operating Maximum 5-foot *Reliant* Lamps

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED 4322	Reliant Ballast For use with 2 or 1 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EB25A-120/277V ELECTRONIC BALLAST (INSTANT START) INPUT: 120V/277V, 50/60Hz, 0.78/0.34A Max	
	TOLL FREE 800-753-2753 MADE IN CHINA	<ul style="list-style-type: none"> • NO PCB's • Open Circuit Voltage: V • Minimum Starting Temp: -20°F • Type 2 Outdoor, Class P 	<ul style="list-style-type: none"> • Less than 10% T.H.D. • Sound Rating: Class A • Protection Thermiques Integree • High Power Factor

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED 4322 E14784	Reliant Ballast For use with 3 or 4 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EBR845-120V-IS ELECTRONIC FLUORESCENT BALLAST INSTANT START INPUT: 120 V, 50/60Hz, 1.54 A Max		
	TOLL FREE 800-753-2793 www.franceformer.com MADE IN CHINA	<ul style="list-style-type: none"> • Open Circuit Voltage: 750V max • Minimum Starting Temp: -20°F • Type 2 Outdoor, Class P • Protection Thermiques Integree 	<ul style="list-style-type: none"> • Sound Rating A • High Power Factor • No PCB's 	FOR LAMP HOLDER 600v, WIRE 1000V CAUTION! DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY. GROUND BALLAST CASE TO AVOID POSSIBLE SHOCK HAZARD.

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED	Reliant Ballast For use with 4 or 3 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EB 45 - 120 V ELECTRONIC BALLAST (INSTANT START) INPUT: 120V, 50/60Hz, 1.6A Max	
	TOLL FREE 800-753-2753 MADE IN KOREA	<ul style="list-style-type: none"> • NO PCB's • Open Circuit Voltage: V • Minimum Starting Temp: -20°F • Type 2 Outdoor, Class P 	<ul style="list-style-type: none"> • Less than 10% T.H.D. • Sound Rating: Class A • Protection Thermiques Integree • High Power Factor

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED	Reliant Ballast For use with 4 or 3 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EB 45 - 277 V ELECTRONIC BALLAST (INSTANT START) INPUT: 277V, 50/60Hz, 0.65A Max	
	TOLL FREE 800-753-2753 MADE IN KOREA	<ul style="list-style-type: none"> • NO PCB's • Open Circuit Voltage: V • Minimum Starting Temp: -20°F • Type 1 Outdoor, Class P 	<ul style="list-style-type: none"> • Less than 10% T.H.D. • Sound Rating: Class A • Protection Thermiques Integree • High Power Factor

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED	Reliant Ballast For use with 6 or 5 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EB 65 - 120 V ELECTRONIC BALLAST (INSTANT START) INPUT: 120V, 50/60Hz, 2.6A MAX	
	TOLL FREE 800-753-2753 MADE IN KOREA	<ul style="list-style-type: none"> • NO PCB's • Open Circuit Voltage: V • Minimum Starting Temp: -20°F • Type 1 Outdoor, Class P 	<ul style="list-style-type: none"> • Less than 10% T.H.D. • Sound Rating: Class A • Protection Thermiques Integree • High Power Factor

FRANCE a Scott Fetzer company Fairview, TN 37062 cUL US LISTED	Reliant Ballast For use with 6 or 5 F24T8, F36T8, F48T8 & F60T8 Fluorescent Reliant Lamps	EB 65 - 277 V ELECTRONIC BALLAST (INSTANT START) INPUT: 277V, 50/60Hz, 1.2A MAX	
	TOLL FREE 800-753-2753 MADE IN KOREA	<ul style="list-style-type: none"> • NO PCB's • Open Circuit Voltage: V • Minimum Starting Temp: -20°F • Type 1 Outdoor, Class P 	<ul style="list-style-type: none"> • Less than 10% T.H.D. • Sound Rating: Class A • Protection Thermiques Integree • High Power Factor

FOR USE WITH ONE (1) LESS LAMP, CAP OFF UNUSED BLUE WIRE

Labels of Instant Start **Reliant** Ballasts for Operating Maximum 8-foot **Reliant** Lamps

FRANCE
a Scott Fetzer company
Fairview, TN 37062

For 1 or 2 T8 Reliant or T8 HO Fluorescent lamps totaling 2 to 16 feet.
No single lamp may be longer than 8 feet.

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR828-120V-IS2

- Input: 120 VAC, 50/60 Hz, 1.2 A Max
- Open Circuit Voltage: 980V
- 900V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

CAUTION! DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY. GROUND BALLAST CASE.

Connect both leads of each lampholder to the same ballast and/or jumper lead.

wa12899

FRANCE
a Scott Fetzer company
Fairview, TN 37062

For 2, 3 or 4 T8 Reliant or T8 HO Fluorescent lamps totaling 4 to 32 feet.
No single lamp may be longer than 8 feet.

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR848-120V-IS2

- Input: 120 VAC, 50/60 Hz, 2.5 A Max
- Open Circuit Voltage: 980V
- 900V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

CAUTION! DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY. GROUND BALLAST CASE.

Connect both leads of each lampholder to the same ballast and/or jumper lead.

wa13000

FRANCE
a Scott Fetzer company
Fairview, TN 37062

For 4, 5 or 6 T8 Reliant or T8 HO Fluorescent Lamps - 8 to 48 feet
No single lamp may be longer than 8 feet.

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR868-120V-IS2

- Input: 120 VAC, 50/60 Hz, 3.8 A Max
- Open Circuit Voltage: 980V
- 900V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

CAUTION! DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY. GROUND BALLAST CASE.

Connect both leads of each lampholder to the same ballast and/or jumper lead.

wa13001

FRANCE
a Scott Fetzer company
Fairview, TN 37062

For any combination of 1 or 2 F24T8, F36T8, F48T8, F60T8, F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps 6 to 16 feet

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR828-120V-ISM

- Input: 120 VAC, 50/60 Hz, 1.3 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP LEAD TO A RED COMMON LEAD.

GROUND BALLAST CASE

wa12894

FRANCE
a Scott Fetzer company
Fairview, TN 37062

For any combination of 1 or 2 F24T8, F36T8, F48T8, F60T8, F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps 6 to 16 feet

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR828-277V-ISM

- Input: 277 VAC, 50/60 Hz, .6 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING OR REPLACING. FOR USE IN PERMANENTLY CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP LEAD TO A RED COMMON LEAD.

GROUND BALLAST CASE

wa12897

Labels of Instant Start *Reliant* Ballasts for Operating Maximum 8-foot *Reliant* Lamps (cont.)

FRANCE
a Scott Fetzer company
Fairview, TN 37062
For any combination of 3 or 4
F24T8, F36T8, F48T8, F60T8,
F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps
18 to 32 feet

TOLL FREE
800-793-4793
www.franceformer.com
MADE IN CHINA

LISTED
820G
E14784

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR848-120V-ISM

- Input: 120 VAC, 50/60 Hz, 2.5 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING
OR REPLACING. FOR USE IN PERMANENTLY
CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP
LEAD TO A RED COMMON LEAD.
GROUND BALLAST CASE

FRANCE
a Scott Fetzer company
Fairview, TN 37062
For any combination of 3 or 4
F24T8, F36T8, F48T8, F60T8,
F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps
18 to 32 feet

TOLL FREE
800-793-4793
www.franceformer.com
MADE IN CHINA

LISTED
820G
E14784

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR848-277V-ISM

- Input: 277 VAC, 50/60 Hz, 1.1 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING
OR REPLACING. FOR USE IN PERMANENTLY
CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP
LEAD TO A RED COMMON LEAD.
GROUND BALLAST CASE

FRANCE
a Scott Fetzer company
Fairview, TN 37062
For any combination of 5 or 6
F24T8, F36T8, F48T8, F60T8,
F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps
30 to 48 feet

TOLL FREE
800-793-4793
www.franceformer.com
MADE IN CHINA

LISTED
820G
E14784

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR868-120V-ISM

- Input: 120 VAC, 50/60 Hz, 3.6 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING
OR REPLACING. FOR USE IN PERMANENTLY
CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP
LEAD TO A RED COMMON LEAD.
GROUND BALLAST CASE

FRANCE
a Scott Fetzer company
Fairview, TN 37062
For any combination of 5 or 6
F24T8, F36T8, F48T8, F60T8,
F72T8, F84T8 & F96T8
Reliant Fluorescent Lamps
30 to 48 feet

TOLL FREE
800-793-4793
www.franceformer.com
MADE IN CHINA

LISTED
820G
E14784

Reliant Ballast
INSTANT START ELECTRONIC BALLAST
EBR868-277V-ISM

- Input: 277 VAC, 50/60 Hz, 1.55 A Max
- Open Circuit Voltage: Less than 300V
- Less than 600V to ground
- High Power Factor
- Type 2 Outdoor, Class P
- Protection Thermiques Integree
- Minimum Starting Temp: -20°F (-30°C)
- Sound Rating: Class A
- No PCB's

Caution!
DISCONNECT LINE VOLTAGE BEFORE INSTALLING
OR REPLACING. FOR USE IN PERMANENTLY
CONNECTED (FIXED) EQUIPMENT ONLY.

CONNECT UNUSED BLUE LAMP
LEAD TO A RED COMMON LEAD.
GROUND BALLAST CASE